


## Chroma Magnifier

The Chroma CCD Magnifier is used for enlarging small objects and printed books. The magnifier is located on the third floor.

### Instructions

- Turn on magnifier
  - **Red** power button
- Place material on magnifier bed
- Use wheel to adjust magnification (see photo below)
- Use **center button** to switch between color, black and white, and negative
- Sun and Moon buttons
  - Decrease contrast
  - Increase contrast
- Using the **Sun and Moon buttons** while holding down the **pencil button**
  - Increase brightness
  - Decrease brightness
- Hold the **pencil button** down to display the magnification on the screen
- **Red** button
  - Located under the wheel
    - Locks the horizontal movement

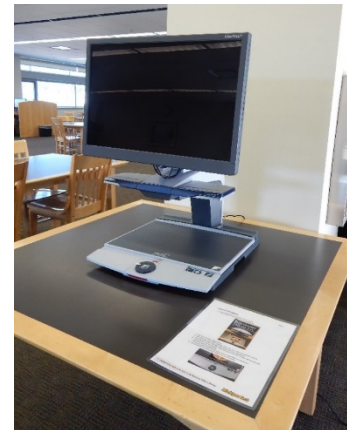

### Troubleshooting

- Use help phone to contact Library Service Desk
  - Located on wall outside print alcove